

Where Used: Part Number 0583387

Model Name	Diagram
AM55RSLD 1999	IGNITION SYSTEM
B25JREUR 1997	IGNITION
BE20SEECB 1998	IGNITION
BE20SEEDA 1996	IGNITION
BE20SEEUM 1997	IGNITION
BE20SELECB 1998	IGNITION
BE20SELEDA 1996	IGNITION
BE20SELEUM 1997	IGNITION
BE20SRECB 1998	IGNITION
BE20SREDA 1996	IGNITION
BE20SREUM 1997	IGNITION
BE20SRLECB 1998	IGNITION
BE20SRLEDA 1996	IGNITION
BE20SRLEUM 1997	IGNITION
BE25BAECM 1998	IGNITION
BE25BAEDR 1996	IGNITION
BE25BAEUA 1997	IGNITION
BE25BALECM 1998	IGNITION
BE25BALEDR 1996	IGNITION
BE25BALEUA 1997	IGNITION
BE25BREDC 1996	IGNITION
BE25BRLEDC 1996	IGNITION
BE25EECE 1998	IGNITION
BE25EEDM 1996	IGNITION
BE25EEUB 1997	IGNITION
BE25ELECE 1998	IGNITION
BE25ELEDM 1996	IGNITION
BE25ELEUB 1997	IGNITION
BE25EREDC 1996	IGNITION
BE25ERLEDC 1996	IGNITION
BE30BAECS 1998	IGNITION
BE30BAEDE 1996	IGNITION
BE30BAEEC 1999	IGNITION

BE30BAEEN 1999	IGNITION
BE30BAEUD 1997	IGNITION
BE30BALECS 1998	IGNITION
BE30BALEDE 1996	IGNITION
BE30BALEUD 1997	IGNITION
BE30BASIA rope start, tiller, 15 in shaft, n/a usa 2001	IGNITION
BE30BASSR Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION
BE30EECS 1998	IGNITION
BE30EEDE 1996	IGNITION
BE30EEUD 1997	IGNITION
BE30ELECS 1998	IGNITION
BE30ELEDE 1996	IGNITION
BE30ELEUD 1997	IGNITION
BE40EECR 1998	IGNITION SYSTEM -- ROPE START
BE40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40EEUC 1997	IGNITION SYSTEM - ROPE START
BE40ELECR 1998	IGNITION SYSTEM -- ROPE START
BE40ELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40ELEUC 1997	IGNITION SYSTEM - ROPE START
BE40TLECR 1998	IGNITION SYSTEM -- ROPE START
BE40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40TLEUC 1997	IGNITION SYSTEM - ROPE START
BE4RDHEDS 1996	MAGNETO
BE4RDHLEDS 1996	MAGNETO
BE50BEEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50BELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50ESECC 1998	IGNITION SYSTEM -- ROPE START
BE50RLECR 1998	IGNITION SYSTEM -- ROPE START
BE50RLEUC 1997	IGNITION SYSTEM - ROPE START
BE50TLECR 1998	IGNITION SYSTEM -- ROPE START
BE50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50TLEUC 1997	IGNITION SYSTEM - ROPE START
BE50TSLECC 1998	IGNITION SYSTEM -- ROPE START
BE50TSLEUS 1997	IGNITION SYSTEM - ROPE START
BE5DREDS 1996	IGNITION

BE5DREUC 1997	IGNITION
BE5DRLEDS 1996	IGNITION
BE5DRLEUC 1997	IGNITION
BE6DRECR 1998	IGNITION
BE6DREDS 1996	IGNITION
BE6DREUC 1997	IGNITION
BE6DRLECR 1998	IGNITION
BE6DRLEDS 1996	IGNITION
BE6DRLEUC 1997	IGNITION
BE6REDS 1996	IGNITION
BE6RLEDS 1996	IGNITION
BE8RCB 1997	IGNITION
BE8RCH 1996	IGNITION
BE8RCLB 1997	IGNITION
BE8RCLH 1996	IGNITION
BE8RCLT 1998	IGNITION
BE8RCT 1998	IGNITION
BE8REDS 1996	IGNITION
BE8RLEDS 1996	IGNITION
BE8SRLEDS 1996	IGNITION
BJ20SEECB 1998	IGNITION
BJ20SEEDA 1996	IGNITION
BJ20SEEUM 1997	IGNITION
BJ20SELECB 1998	IGNITION
BJ20SELEDA 1996	IGNITION
BJ20SELEUM 1997	IGNITION
BJ20SRECB 1998	IGNITION
BJ20SREDA 1996	IGNITION
BJ20SREUM 1997	IGNITION
BJ20SRLECB 1998	IGNITION
BJ20SRLEDA 1996	IGNITION
BJ20SRLEUM 1997	IGNITION
BJ25BAECM 1998	IGNITION
BJ25BAEDR 1996	IGNITION
BJ25BAEUA 1997	IGNITION

BJ25BALECM 1998	IGNITION
BJ25BALEDR 1996	IGNITION
BJ25BALEUA 1997	IGNITION
BJ25BREDC 1996	IGNITION
BJ25BRLEDC 1996	IGNITION
BJ25EECE 1998	IGNITION
BJ25EEDM 1996	IGNITION
BJ25EEED 1999	IGNITION
BJ25EEEN 1999	IGNITION
BJ25EEUB 1997	IGNITION
BJ25ELECE 1998	IGNITION
BJ25ELEDM 1996	IGNITION
BJ25ELEED 1999	IGNITION
BJ25ELEEN 1999	IGNITION
BJ25ELEUB 1997	IGNITION
BJ25ELSIC elec start, remote, 20 in shaft, n/a usa 2001	IGNITION
BJ25ELSSS Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION
BJ25EREDC 1996	IGNITION
BJ25ERLEDC 1996	IGNITION
BJ25ESIC elec start, remote, 15 in shaft, n/a usa 2001	IGNITION
BJ25ESSS Elec. Start, 15 IN. shaft, N/A USA 2000	IGNITION
BJ25EVSIC elec start, remote, 20 in shaft, wht, n/a usa 2001	IGNITION
BJ25EVSIC elec start, remote, 15 in shaft, wht, n/a usa 2001	IGNITION
BJ30BAECS 1998	IGNITION
BJ30BAEDE 1996	IGNITION
BJ30BAEEC 1999	IGNITION
BJ30BAEEN 1999	IGNITION
BJ30BAEUD 1997	IGNITION
BJ30BALECS 1998	IGNITION
BJ30BALEDE 1996	IGNITION
BJ30BALEUD 1997	IGNITION
BJ30EECS 1998	IGNITION
BJ30EEDE 1996	IGNITION
BJ30EEEC 1999	IGNITION
BJ30EEEN 1999	IGNITION

BJ30EEUD 1997	IGNITION
BJ30ELECS 1998	IGNITION
BJ30ELEDE 1996	IGNITION
BJ30ELEEC 1999	IGNITION
BJ30ELEEN 1999	IGNITION
BJ30ELEUD 1997	IGNITION
BJ30ELSIA elec start, remote, 20 in shaft, n/a usa 2001	IGNITION
BJ30ELSSR Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION
BJ30ESIA elec start, remote, 15 in shaft, n/a usa 2001	IGNITION
BJ30ESSR Elec. Start, 15 IN. shaft, N/A USA 2000	IGNITION
BJ30EVSIA elec start, remote, 20 in shaft, wht, n/a usa 2001	IGNITION
BJ30EVSIA elec start, remote, 15 in shaft, wht, n/a usa 2001	IGNITION
BJ40EECR 1998	IGNITION SYSTEM -- ROPE START
BJ40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ40EEEA 1999	IGNITION SYSTEM -- ROPE START
BJ40EEUC 1997	IGNITION SYSTEM - ROPE START
BJ40ELECR 1998	IGNITION SYSTEM -- ROPE START
BJ40ELEDs 1996	IGNITION SYSTEM - 40 ROPE START
BJ40ELEEA 1999	IGNITION SYSTEM -- ROPE START
BJ40ELEUC 1997	IGNITION SYSTEM - ROPE START
BJ40ELSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40ELSSM Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40ESIF elec start, 15 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40ESSM Elec. Start, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40PLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ40PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40PLSSM Elec. Start, TNT, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40TLECR 1998	IGNITION SYSTEM -- ROPE START
BJ40TLEDs 1996	IGNITION SYSTEM - 40 ROPE START
BJ40TLEUC 1997	IGNITION SYSTEM - ROPE START
BJ4RDHEDs 1996	MAGNETO
BJ4RDHLEDs 1996	MAGNETO
BJ50BEEDs 1996	IGNITION SYSTEM - 40 ROPE START
BJ50BELEDs 1996	IGNITION SYSTEM - 40 ROPE START
BJ50EEER 1999	IGNITION SYSTEM -- ROPE START

BJ50ELEER 1999	IGNITION SYSTEM -- ROPE START
BJ50ELSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50ELSSA Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50ESECC 1998	IGNITION SYSTEM -- ROPE START
BJ50ESIF elec start, 15 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50ESSA Elec Start, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50PLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ50PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50RLECR 1998	IGNITION SYSTEM -- ROPE START
BJ50RLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ50RLEUC 1997	IGNITION SYSTEM - ROPE START
BJ50RLSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50RLSSM Rope Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50TLECR 1998	IGNITION SYSTEM -- ROPE START
BJ50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ50TLEUC 1997	IGNITION SYSTEM - ROPE START
BJ50TSLECC 1998	IGNITION SYSTEM -- ROPE START
BJ50TSLEUS 1997	IGNITION SYSTEM - ROPE START
BJ5DREDS 1996	IGNITION
BJ5DREUC 1997	IGNITION
BJ5DRLEDS 1996	IGNITION
BJ5DRLEUC 1997	IGNITION
BJ6DRECR 1998	IGNITION
BJ6DREDS 1996	IGNITION
BJ6DREUC 1997	IGNITION
BJ6DRLECR 1998	IGNITION
BJ6DRLEDS 1996	IGNITION
BJ6DRLEUC 1997	IGNITION
BJ6REDS 1996	IGNITION
BJ6RLEDS 1996	IGNITION
BJ8RCB 1997	IGNITION
BJ8RCH 1996	IGNITION
BJ8RCLB 1997	IGNITION
BJ8RCLH 1996	IGNITION

BJ8RCLT 1998	IGNITION
BJ8RCT 1998	IGNITION
BJ8REDS 1996	IGNITION
BJ8RLEDS 1996	IGNITION
BJ8SRLEDS 1996	IGNITION
D25RWA 1988	MAGNETO
D25RWLA 1988	MAGNETO
E10ECCD 1988	IGNITION
E10ECUE 1987	IGNITION
E10ELCCD 1988	IGNITION
E10ELCUE 1987	IGNITION
E10RCCD 1988	IGNITION
E10RCUE 1987	IGNITION
E10RLCCD 1988	IGNITION
E10RLCUE 1987	IGNITION
E10SELCCD 1988	IGNITION
E10SELCUE 1987	IGNITION
E15ECCS 1988	IGNITION
E15ECUD 1987	IGNITION
E15ELCCS 1988	IGNITION
E15ELCUD 1987	IGNITION
E15RCCS 1988	IGNITION
E15RCUD 1987	IGNITION
E15RLCCS 1988	IGNITION
E15RLCUD 1987	IGNITION
E20CRCCA 1988	IGNITION
E20CRCUR 1987	IGNITION
E20CREDA 1996	IGNITION
E20CREOR 1995	IGNITION
E20CRERC 1994	IGNITION
E20CRETS 1993	IGNITION
E20CREUM 1997	IGNITION
E20CRLCCA 1988	IGNITION
E20CRLCUR 1987	IGNITION
E20CRLEDA 1996	IGNITION

E20CRLEOR 1995	IGNITION
E20CRLERC 1994	IGNITION
E20CRLETS 1993	IGNITION
E20CRLEUM 1997	IGNITION
E20ECCA 1988	IGNITION
E20ECUR 1987	IGNITION
E20EEOR 1995	IGNITION
E20EERC 1994	IGNITION
E20EETS 1993	IGNITION
E20ELCCA 1988	IGNITION
E20ELCUR 1987	IGNITION
E20ELEOR 1995	IGNITION
E20ELERC 1994	IGNITION
E20ELETs 1993	IGNITION
E25ECCM 1988	IGNITION
E25ECUA 1987	IGNITION
E25EECE 1998	IGNITION
E25EEDM 1996	IGNITION
E25EEOA 1995	IGNITION
E25EERR 1994	IGNITION
E25EETC 1993	IGNITION
E25EEUB 1997	IGNITION
E25ELCCM 1988	IGNITION
E25ELCUA 1987	IGNITION
E25ELECE 1998	IGNITION
E25ELEDM 1996	IGNITION
E25ELEOA 1995	IGNITION
E25ELERR 1994	IGNITION
E25ELETc 1993	IGNITION
E25ELEUB 1997	IGNITION
E25JRECA 1998	IGNITION
E25JREDC 1996	IGNITION
E25JREOS 1995	IGNITION
E25RCCA 1988	IGNITION
E25RCUR 1987	IGNITION

E25RECB 1998	IGNITION
E25REDA 1996	IGNITION
E25REOR 1995	IGNITION
E25RERC 1994	IGNITION
E25RETS 1993	IGNITION
E25REUM 1997	IGNITION
E25RLCCA 1988	IGNITION
E25RLCUR 1987	IGNITION
E25RLECB 1998	IGNITION
E25RLEDA 1996	IGNITION
E25RLEOR 1995	IGNITION
E25RLERC 1994	IGNITION
E25RLETS 1993	IGNITION
E25RLEUM 1997	IGNITION
E25RWCUR 1987	MAGNETO
E25RWEDC 1996	IGNITION - H25FP
E25RWEDC 1996	IGNITION - 25RS - 25RW - S25RP
E25RWENB 1992	IGNITION
E25RWEOS 1995	IGNITION - H25FP
E25RWEOS 1995	IGNITION - 25RS - 25RW - S25RP
E25RWERD 1994	IGNITION - 25RW
E25RWETE 1993	IGNITION - 25RW
E25RWEUR 1997	IGNITION - H25FP
E25RWEUR 1997	IGNITION - 25RS, 25RW, S25RP
E25RWLCUR 1987	MAGNETO
E25RWLEDC 1996	IGNITION - H25FP
E25RWLEDC 1996	IGNITION - 25RS - 25RW - S25RP
E25RWLENB 1992	IGNITION
E25RWLEOS 1995	IGNITION - H25FP
E25RWLEOS 1995	IGNITION - 25RS - 25RW - S25RP
E25RWLERD 1994	IGNITION - 25RW
E25RWLETE 1993	IGNITION - 25RW
E25RWLEUR 1997	IGNITION - H25FP
E25RWLEUR 1997	IGNITION - 25RS, 25RW, S25RP
E25TECCA 1988	IGNITION

E25TECUR 1987	IGNITION
E25TEECB 1998	IGNITION
E25TEEDA 1996	IGNITION
E25TEEOR 1995	IGNITION
E25TEERC 1994	IGNITION
E25TEETS 1993	IGNITION
E25TEEUM 1997	IGNITION
E25TELCCA 1988	IGNITION
E25TELCUR 1987	IGNITION
E25TELECB 1998	IGNITION
E25TELEDA 1996	IGNITION
E25TELEOR 1995	IGNITION
E25TELETS 1993	IGNITION
E25TELEUM 1997	IGNITION
E25WREEN 1999	IGNITION
E25WREES 1999	IGNITION
E25WRLEEN 1999	IGNITION
E25WRLEES 1999	IGNITION
E25WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION
E25WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	IGNITION
E25WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
E25WRSSC Commercial, Rope Start, 15 IN. shaft 2000	IGNITION
E28ESLCCR 1988	IGNITION
E28ESLCUC 1987	MAGNETO
E28ESLEDR 1996	IGNITION
E28ESLEOC 1995	IGNITION
E28ESLERS 1994	IGNITION
E28ESLETD 1993	IGNITION
E30ECCE 1988	IGNITION
E30ECUB 1987	IGNITION
E30EECS 1998	IGNITION
E30EEDE 1996	IGNITION
E30EEOB 1995	IGNITION
E30EERM 1994	IGNITION
E30EETA 1993	IGNITION

E30EEUD 1997	IGNITION
E30ELCCE 1988	IGNITION
E30ELCUB 1987	IGNITION
E30ELECS 1998	IGNITION
E30ELEDE 1996	IGNITION
E30ELEOB 1995	IGNITION
E30ELERM 1994	IGNITION
E30ELET A 1993	IGNITION
E30ELEUD 1997	IGNITION
E30RCCE 1988	IGNITION
E30RCUB 1987	IGNITION
E30REDE 1996	IGNITION
E30REOB 1995	IGNITION
E30RERM 1994	IGNITION
E30RETA 1993	IGNITION
E30REUD 1997	IGNITION
E30RLCCE 1988	IGNITION
E30RLCUB 1987	IGNITION
E30RLEDE 1996	IGNITION
E30RLEOB 1995	IGNITION
E30RLERM 1994	IGNITION
E30RLETA 1993	IGNITION
E30RLEUD 1997	IGNITION
E30TECCE 1988	IGNITION
E30TECUB 1987	IGNITION
E30TEECS 1998	IGNITION
E30TEEDE 1996	IGNITION
E30TEEOB 1995	IGNITION
E30TEERM 1994	IGNITION
E30TEETA 1993	IGNITION
E30TEEUD 1997	IGNITION
E30TELCCE 1988	IGNITION
E30TELCUB 1987	IGNITION
E30TELECB 1998	IGNITION
E30TELEDE 1996	IGNITION

E30TELEOB 1995	IGNITION
E30TELERM 1994	IGNITION
E30TELETA 1993	IGNITION
E30TELEUD 1997	IGNITION
E35AELCUD 1987	IGNITION SYSTEM
E35ARLCUD 1987	IGNITION SYSTEM
E35RCCE 1988	IGNITION
E35RCUB 1987	IGNITION
E35RERM 1994	IGNITION
E35RETA 1993	IGNITION
E35RLCCE 1988	IGNITION
E35RLCUB 1987	IGNITION
E35RLERM 1994	IGNITION
E35RLETA 1993	IGNITION
E40AELCCS 1988	IGNITION SYSTEM
E40ARLCCS 1988	IGNITION SYSTEM
E40ATLCCS 1988	IGNITION SYSTEM
E40ECCS 1988	IGNITION SYSTEM
E40ECUD 1987	IGNITION SYSTEM
E40EEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40EERE 1994	IGNITION SYSTEM - 40 ROPE START
E40EETB 1993	IGNITION SYSTEM - 40 ROPE START
E40ELCCS 1988	IGNITION SYSTEM
E40ELCUD 1987	IGNITION SYSTEM
E40ELECR 1998	IGNITION SYSTEM -- ROPE START
E40ELEDs 1996	IGNITION SYSTEM - 40 ROPE START
E40ELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40ELERE 1994	IGNITION SYSTEM - 40 ROPE START
E40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
E40ELEUC 1997	IGNITION SYSTEM - ROPE START
E40JRECA 1998	IGNITION SYSTEM
E40JREDC 1996	IGNITION SYSTEM
E40JREOS 1995	IGNITION SYSTEM
E40JREUR 1997	IGNITION SYSTEM
E40RCCS 1988	IGNITION SYSTEM

E40RCUD 1987	IGNITION SYSTEM
E40RECR 1998	IGNITION SYSTEM -- ROPE START
E40REDS 1996	IGNITION SYSTEM - 40 ROPE START
E40REOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40RERE 1994	IGNITION SYSTEM - 40 ROPE START
E40RETB 1993	IGNITION SYSTEM - 40 ROPE START
E40REUC 1997	IGNITION SYSTEM - ROPE START
E40RLCCS 1988	IGNITION SYSTEM
E40RLCUD 1987	IGNITION SYSTEM
E40RLECR 1998	IGNITION SYSTEM -- ROPE START
E40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40RLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40RLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40RLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40RLEUC 1997	IGNITION SYSTEM - ROPE START
E40TECCS 1988	IGNITION SYSTEM
E40TECUD 1987	IGNITION SYSTEM
E40TEECR 1998	IGNITION SYSTEM -- ROPE START
E40TEEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TEERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TEETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TEEUC 1997	IGNITION SYSTEM - ROPE START
E40TELCCS 1988	IGNITION SYSTEM
E40TELECR 1998	IGNITION SYSTEM -- ROPE START
E40TELEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TELERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TELEUC 1997	IGNITION SYSTEM - ROPE START
E40TLCCS 1988	IGNITION SYSTEM
E40TLCUD 1987	IGNITION SYSTEM
E40TLECR 1998	IGNITION SYSTEM -- ROPE START
E40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START

E40TLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
E40TLEUC 1997	IGNITION SYSTEM - ROPE START
E40TTLCCS 1988	IGNITION SYSTEM
E40TTLECR 1998	IGNITION SYSTEM -- ROPE START
E40TTLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TTLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TTLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TTLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TTLETF 1993	IGNITION SYSTEM - 40 ROPE START
E40TTLEUC 1997	IGNITION SYSTEM - ROPE START
E40WREES 1999	IGNITION SYSTEM
E40WRLEES 1999	IGNITION SYSTEM
E40WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E40WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E40WRYEES 1999	IGNITION SYSTEM
E40WRY SIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
E45RCENM 1992	IGNITION SYSTEM - ROPE START
E45RCEOD 1995	IGNITION SYSTEM
E45RCERE 1994	IGNITION SYSTEM
E45RCETB 1993	IGNITION SYSTEM
E45RCLEDS 1996	IGNITION SYSTEM
E45RCLENM 1992	IGNITION SYSTEM - ROPE START
E45RCLEOD 1995	IGNITION SYSTEM
E45RCLERE 1994	IGNITION SYSTEM
E45RCLETB 1993	IGNITION SYSTEM
E45RCLEUC 1997	IGNITION SYSTEM
E45WML ENM 1992	IGNITION SYSTEM - ROPE START
E48ESLCCC 1988	IGNITION SYSTEM
E48ESLCUS 1987	IGNITION SYSTEM
E4RDHCCS 1988	MAGNETO

E4RDHCUD 1987	MAGNETO
E4RDHEOD 1995	MAGNETO
E4RDHERE 1994	MAGNETO
E4RDHLCCS 1988	MAGNETO
E4RDHLCUD 1987	MAGNETO
E4RDHLEOD 1995	MAGNETO
E4RDHLERE 1994	MAGNETO
E50BECCS 1988	IGNITION SYSTEM
E50BECUD 1987	IGNITION SYSTEM
E50BEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50BEERE 1994	IGNITION SYSTEM - 40 ROPE START
E50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
E50BELCCS 1988	IGNITION SYSTEM
E50BELCUD 1987	IGNITION SYSTEM
E50BELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50BELERE 1994	IGNITION SYSTEM - 40 ROPE START
E50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
E50ESLECC 1998	IGNITION SYSTEM -- ROPE START
E50ESLEUR 1997	IGNITION SYSTEM - ROPE START
E50JEDS 1996	IGNITION SYSTEM - 40 ROPE START
E50JEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50JERE 1994	IGNITION SYSTEM - 40 ROPE START
E50JETB 1993	IGNITION SYSTEM - 40 ROPE START
E50JEUC 1997	IGNITION SYSTEM - ROPE START
E50TELCCS 1988	IGNITION SYSTEM
E50TELCUD 1987	IGNITION SYSTEM
E50TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50TELERE 1994	IGNITION SYSTEM - 40 ROPE START
E50TELETB 1993	IGNITION SYSTEM - 40 ROPE START
E50TLCCS 1988	IGNITION SYSTEM
E50TLCUD 1987	IGNITION SYSTEM
E50TLECR 1998	IGNITION SYSTEM -- ROPE START
E50TLEDs 1996	IGNITION SYSTEM - 40 ROPE START
E50TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50TLERE 1994	IGNITION SYSTEM - 40 ROPE START

E50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
E50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
E50TLEUC 1997	IGNITION SYSTEM - ROPE START
E50TSLECC 1998	IGNITION SYSTEM -- ROPE START
E50TSLEUS 1997	IGNITION SYSTEM - ROPE START
E55RSLC 1997	IGNITION SYSTEM
E55RSLG 1995	IGNITION SYSTEM
E55RSLW 1996	IGNITION SYSTEM
E55RWLENM 1992	IGNITION SYSTEM - ROPE START
E55RWLERE 1994	IGNITION SYSTEM
E55RWLETB 1993	IGNITION SYSTEM
E55WREES 1999	IGNITION SYSTEM
E55WRLEES 1999	IGNITION SYSTEM
E55WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
E55WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E55WRYEES 1999	IGNITION SYSTEM
E55WRYAIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
E5DRECR 1998	IGNITION
E5DRLECR 1998	IGNITION
E6RCCS 1988	IGNITION
E6RECR 1998	IGNITION
E6REDS 1996	IGNITION
E6REOD 1995	IGNITION
E6RERE 1994	IGNITION
E6RETB 1993	IGNITION
E6REUC 1997	IGNITION
E6RLCCS 1988	IGNITION
E6RLECR 1998	IGNITION
E6RLEDS 1996	IGNITION
E6RLEOD 1995	IGNITION
E6RLERE 1994	IGNITION
E6RLETB 1993	IGNITION

E6RLEUC 1997	IGNITION
E6SLCCS 1988	IGNITION
E6SLEDs 1996	IGNITION
E6SLEOD 1995	IGNITION
E6SLERE 1994	IGNITION
E6SLETB 1993	IGNITION
E8DREEA 1999	IGNITION
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION
E8RCCS 1988	IGNITION
E8RECR 1998	IGNITION
E8REDS 1996	IGNITION
E8REOD 1995	IGNITION
E8RERE 1994	IGNITION
E8RETB 1993	IGNITION
E8REUC 1997	IGNITION
E8RLCCS 1988	IGNITION
E8RLECR 1998	IGNITION
E8RLEDs 1996	IGNITION
E8RLEOD 1995	IGNITION
E8RLERE 1994	IGNITION
E8RLETB 1993	IGNITION
E8RLEUC 1997	IGNITION
E8SRLCCS 1988	IGNITION
E8SRLECA 1998	IGNITION
E8SRLEDs 1996	IGNITION
E8SRLEOD 1995	IGNITION
E8SRLERE 1994	IGNITION
E8SRLETB 1993	IGNITION
E8SRLEUC 1997	IGNITION
E8WREES 1999	IGNITION
E8WRLEES 1999	IGNITION
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	IGNITION
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	IGNITION
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION

ELECTRICAL 1988	AC LIGHTING KIT 35 - 55 ROPE START COMMERCIAL
ELECTRICAL 1989	ELECTRIC STARTING KIT 45, 55 COMMERCIALS
ELECTRICAL 1992	AC LIGHTING KIT 45 & 55 ROPE START COMMERCIALS
HE20CREDA 1996	IGNITION
HE20CRLEDA 1996	IGNITION
HE25FPO 1996	IGNITION - H25FP
HE25FPO 1996	IGNITION - 25RS - 25RW - S25RP
HE25FPV 1997	IGNITION - H25FP
HE25FPV 1997	IGNITION - 25RS, 25RW, S25RP
HE25RAEDA 1996	IGNITION
HE25RAEUM 1997	IGNITION
HE25REDA 1996	IGNITION
HE25RLEDA 1996	IGNITION
HE25RSLO 1996	IGNITION - H25FP
HE25RSLO 1996	IGNITION - 25RS - 25RW - S25RP
HE25RSLV 1997	IGNITION - H25FP
HE25RSLV 1997	IGNITION - 25RS, 25RW, S25RP
HE25TELEDA 1996	IGNITION
HE30REDE 1996	IGNITION
HE30RLEDE 1996	IGNITION
HE40REDS 1996	IGNITION SYSTEM - 40 ROPE START
HE40REUC 1997	IGNITION SYSTEM - ROPE START
HE40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
HE40RLEUC 1997	IGNITION SYSTEM - ROPE START
HE45RCLEDS 1996	IGNITION SYSTEM
HE45RCLEUC 1997	IGNITION SYSTEM
HE55RSLC 1997	IGNITION SYSTEM
HE55RSLW 1996	IGNITION SYSTEM
HJ20CREDA 1996	IGNITION
HJ20CRLEDA 1996	IGNITION
HJ25FPO 1996	IGNITION - H25FP
HJ25FPO 1996	IGNITION - 25RS - 25RW - S25RP
HJ25FPV 1997	IGNITION - H25FP
HJ25FPV 1997	IGNITION - 25RS, 25RW, S25RP

HJ25RAEDA 1996	IGNITION
HJ25RAEUM 1997	IGNITION
HJ25RLEDA 1996	IGNITION
HJ25RLSV 1997	IGNITION - H25FP
HJ25RLSV 1997	IGNITION - 25RS, 25RW, S25RP
HJ25RSLO 1996	IGNITION - H25FP
HJ25RSLO 1996	IGNITION - 25RS - 25RW - S25RP
HJ25TELEDA 1996	IGNITION
HJ30REDE 1996	IGNITION
HJ30RLEDE 1996	IGNITION
HJ40REDS 1996	IGNITION SYSTEM - 40 ROPE START
HJ40REUC 1997	IGNITION SYSTEM - ROPE START
HJ40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
HJ40RLEUC 1997	IGNITION SYSTEM - ROPE START
HJ45RCLEDS 1996	IGNITION SYSTEM
HJ45RCLEUC 1997	IGNITION SYSTEM
HJ55RSLC 1997	IGNITION SYSTEM
HJ55RSLW 1996	IGNITION SYSTEM
J10ECCD 1988	IGNITION
J10ECUE 1987	IGNITION
J10ELCCD 1988	IGNITION
J10ELCUE 1987	IGNITION
J10RCCD 1988	IGNITION
J10RCUE 1987	IGNITION
J10RLCCD 1988	IGNITION
J10RLCUE 1987	IGNITION
J10SELCCD 1988	IGNITION
J10SELCUE 1987	IGNITION
J15ECCS 1988	IGNITION
J15ECUD 1987	IGNITION
J15ELCCS 1988	IGNITION
J15ELCUD 1987	IGNITION
J15RCCS 1988	IGNITION
J15RCUD 1987	IGNITION
J15RLCCS 1988	IGNITION

J15RLCUD 1987	IGNITION
J20CRCCA 1988	IGNITION
J20CRCUR 1987	IGNITION
J20CREDA 1996	IGNITION
J20CREOR 1995	IGNITION
J20CRERC 1994	IGNITION
J20CRETS 1993	IGNITION
J20CREUM 1997	IGNITION
J20CRLCCA 1988	IGNITION
J20CRLCUR 1987	IGNITION
J20CRLEDA 1996	IGNITION
J20CRLEOR 1995	IGNITION
J20CRLERC 1994	IGNITION
J20CRLETS 1993	IGNITION
J20CRLEUM 1997	IGNITION
J20ECCA 1988	IGNITION
J20ECUR 1987	IGNITION
J20EEOR 1995	IGNITION
J20EERC 1994	IGNITION
J20EETS 1993	IGNITION
J20ELCCA 1988	IGNITION
J20ELCUR 1987	IGNITION
J20ELEOR 1995	IGNITION
J20ELERC 1994	IGNITION
J20ELET 1993	IGNITION
J25ECCM 1988	IGNITION
J25ECUA 1987	IGNITION
J25EECE 1998	IGNITION
J25EEDM 1996	IGNITION
J25EEED 1999	IGNITION
J25EEEN 1999	IGNITION
J25EEOA 1995	IGNITION
J25EERR 1994	IGNITION
J25EETC 1993	IGNITION
J25EEUB 1997	IGNITION

J25ELCCM 1988	IGNITION
J25ELCUA 1987	IGNITION
J25ELECE 1998	IGNITION
J25ELEDM 1996	IGNITION
J25ELEED 1999	IGNITION
J25ELEEN 1999	IGNITION
J25ELEOA 1995	IGNITION
J25ELERR 1994	IGNITION
J25ELETC 1993	IGNITION
J25ELEUB 1997	IGNITION
J25ELSIC elec start, remote, 20 in shaft 2001	IGNITION
J25ELSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J25ELSNF Electric start, Carb, White, Remote, 20 in., 4 Amp Alt 2002	IGNITION
J25ELSOB	IGNITION
J25ELSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J25ELSRM	IGNITION
J25ELSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J25ELSSS Elec. Start, 20 IN. shaft 2000	IGNITION
J25ELSTA	IGNITION
J25ELSTA - FR	22-5_SYSTÈME D'ALLUMAGE
J25ESIC elec start, remote, 15 in shaft 2001	IGNITION
J25ESSS Elec. Start, 15 IN. shaft 2000	IGNITION
J25EVSIC elec start, remote, 120 in shaft, wht 2001	IGNITION
J25EVSIC elec start, remote, 15 in shaft, wht 2001	IGNITION
J25GTESOC	IGNITION
J25GTESOC - FR	22-5_SYSTÈME D'ALLUMAGE
J25GTESRS	IGNITION
J25GTESRS - FR	22-5_SYSTÈME D'ALLUMAGE
J25JRECA 1998	IGNITION
J25JREDC 1996	IGNITION
J25JREEM 1999	IGNITION
J25JREEN 1999	IGNITION
J25JREOS 1995	IGNITION
J25JREUR 1997	IGNITION
J25JRSIE jet drive, rope start, tiller, 15 in shaft 2001	IGNITION

J25JRSSB Jet Drive,Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J25JRTSSS Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J25RCCA 1988	IGNITION
J25RCUR 1987	IGNITION
J25RECB 1998	IGNITION
J25REDA 1996	IGNITION
J25REEB 1999	IGNITION
J25REEN 1999	IGNITION
J25REOR 1995	IGNITION
J25RERC 1994	IGNITION
J25RETS 1993	IGNITION
J25REUM 1997	IGNITION
J25RLCCA 1988	IGNITION
J25RLCUR 1987	IGNITION
J25RLECB 1998	IGNITION
J25RLEDA 1996	IGNITION
J25RLEEB 1999	IGNITION
J25RLEEN 1999	IGNITION
J25RLEOR 1995	IGNITION
J25RLERC 1994	IGNITION
J25RLETS 1993	IGNITION
J25RLEUM 1997	IGNITION
J25RLSID rope start, tiller, 20 in shaft 2001	IGNITION
J25RLSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J25RLSNF Rope start, White, Tiller, 20 in. shaft, A/C Light 2002	IGNITION
J25RLSOA	IGNITION
J25RLSOA - FR	22-5_SYSTÈME D'ALLUMAGE
J25RLSRR	IGNITION
J25RLSRR - FR	22-5_SYSTÈME D'ALLUMAGE
J25RLSSE Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J25RLSTC	IGNITION
J25RLSTC - FR	22-5_SYSTÈME D'ALLUMAGE
J25RSID rope start, tiller, 15 in shaft 2001	IGNITION
J25RSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J25RSNF Rope start, White, Tiller,15 in. shaft, A/C Light 2002	IGNITION

J25RSOA	IGNITION
J25RSOA - FR	22-5_SYSTÈME D'ALLUMAGE
J25RSRR	IGNITION
J25RSRR - FR	22-5_SYSTÈME D'ALLUMAGE
J25RSSE Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
J25RSTC	IGNITION
J25RSTC - FR	22-5_SYSTÈME D'ALLUMAGE
J25RTSOS	IGNITION
J25RTSOS - FR	22-5_SYSTÈME D'ALLUMAGE
J25RVLSID rope start, tiller, 20 in shaft, wht 2001	IGNITION
J25RVSID rope start, tiller, 15 in shaft, wht 2001	IGNITION
J25RWCUR 1987	MAGNETO
J25RWEDC 1996	IGNITION - H25FP
J25RWEDC 1996	IGNITION - 25RS - 25RW - S25RP
J25RWENB 1992	IGNITION
J25RWEOS 1995	IGNITION - H25FP
J25RWEOS 1995	IGNITION - 25RS - 25RW - S25RP
J25RWERD 1994	IGNITION - 25RW
J25RWETE 1993	IGNITION - 25RW
J25RWEUR 1997	IGNITION - H25FP
J25RWEUR 1997	IGNITION - 25RS, 25RW, S25RP
J25RWLCUR 1987	MAGNETO
J25RWLEDC 1996	IGNITION - H25FP
J25RWLEDC 1996	IGNITION - 25RS - 25RW - S25RP
J25RWLENB 1992	IGNITION
J25RWLEOS 1995	IGNITION - H25FP
J25RWLEOS 1995	IGNITION - 25RS - 25RW - S25RP
J25RWLERD 1994	IGNITION - 25RW
J25RWLETE 1993	IGNITION - 25RW
J25RWLEUR 1997	IGNITION - H25FP
J25RWLEUR 1997	IGNITION - 25RS, 25RW, S25RP
J25TECCA 1988	IGNITION
J25TECUR 1987	IGNITION
J25TEECB 1998	IGNITION
J25TEEDA 1996	IGNITION

J25TEEEE 1999	IGNITION
J25TEEEEN 1999	IGNITION
J25TEEOR 1995	IGNITION
J25TEERC 1994	IGNITION
J25TEETS 1993	IGNITION
J25TEEUM 1997	IGNITION
J25TELCCA 1988	IGNITION
J25TELCUR 1987	IGNITION
J25TELECB 1998	IGNITION
J25TELEDA 1996	IGNITION
J25TELEEE 1999	IGNITION
J25TELEEN 1999	IGNITION
J25TELEOR 1995	IGNITION
J25TELERC	IGNITION
J25TELETS 1993	IGNITION
J25TELEUM 1997	IGNITION
J25TELSIS elec start, tiller, 20 in shaft 2001	IGNITION
J25TELSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J25TELSNF Electric start, White, Tiller, 20 in., 4 Amp Alt 2002	IGNITION
J25TELSOM	IGNITION
J25TELSOM - FR	22-5_SYSTÈME D'ALLUMAGE
J25TELSRA	IGNITION
J25TELSRA - FR	22-5_SYSTÈME D'ALLUMAGE
J25TELSSD Elec. Start, Tiller, 20 IN. shaft 2000	IGNITION
J25TELSTR	IGNITION
J25TELSTR - FR	22-5_SYSTÈME D'ALLUMAGE
J25TESIS elec start, tiller, 15 in shaft 2001	IGNITION
J25TESNF - FR	22-5_SYSTÈME D'ALLUMAGE
J25TESNF Electric start, White, Tiller, 15 in. shaft, 4 Amp Alt 2002	IGNITION
J25TESOM	IGNITION
J25TESOM - FR	22-5_SYSTÈME D'ALLUMAGE
J25TESRA	IGNITION
J25TESRA - FR	22-5_SYSTÈME D'ALLUMAGE
J25TESSD Elec. Start, Tiller, 15 IN. shaft 2000	IGNITION
J25TESTR	IGNITION

J25TESTR - FR	22-5_SYSTÈME D'ALLUMAGE
J25TVLSIS elec start, tiller, 20 in shaft 2001	IGNITION
J25TVSIS elec start, tiller, 15 in shaft 2001	IGNITION
J25WREEN 1999	IGNITION
J25WREES 1999	IGNITION
J25WRLEEN 1999	IGNITION
J25WRLEES 1999	IGNITION
J25WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION
J25WRLSOB	IGNITION
J25WRLSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J25WRLSRM	IGNITION
J25WRLSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J25WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	IGNITION
J25WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
J25WRSOB	IGNITION
J25WRSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J25WRSRM	IGNITION
J25WRSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J25WRSSC Commercial, Rope Start, 15 IN. shaft 2000	IGNITION
J28ESLCCR 1988	IGNITION
J28ESLCUC 1987	MAGNETO
J28ESLEDR 1996	IGNITION
J28ESLEOC 1995	IGNITION
J28ESLERS 1994	IGNITION
J28ESLETD 1993	IGNITION
J30ECCE 1988	IGNITION
J30ECUB 1987	IGNITION
J30EECS 1998	IGNITION
J30EEDE 1996	IGNITION
J30EEEC 1999	IGNITION
J30EEEN 1999	IGNITION
J30EEOB 1995	IGNITION
J30EERM 1994	IGNITION
J30EETA 1993	IGNITION
J30EEUD 1997	IGNITION

J30ELCCE 1988	IGNITION
J30ELCUB 1987	IGNITION
J30ELECS 1998	IGNITION
J30ELEDE 1996	IGNITION
J30ELEEC 1999	IGNITION
J30ELEEN 1999	IGNITION
J30ELEOB 1995	IGNITION
J30ELERM 1994	IGNITION
J30ELETA 1993	IGNITION
J30ELEUD 1997	IGNITION
J30ELSIA elec start, remote, 20 in shaft 2001	IGNITION
J30ELSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J30ELSNF Electric start, Carb, White, Remote, 20 in., 4 Amp Alt, 2002	IGNITION
J30ELSOD	IGNITION
J30ELSOD - FR	22-5_SYSTÈME D'ALLUMAGE
J30ELSRE	IGNITION
J30ELSRE - FR	22-5_SYSTÈME D'ALLUMAGE
J30ELSSR Elec. Start, 20 IN. shaft 2000	IGNITION
J30ELSTB	IGNITION
J30ELSTB - FR	22-5_SYSTÈME D'ALLUMAGE
J30ESIA elec start, remote, 15 in shaft 2001	IGNITION
J30ESSR Elec. Start, 15 IN. shaft 2000	IGNITION
J30EVLSIA elec start, remote, 20 in shaft, wht 2001	IGNITION
J30JREEM 1999	IGNITION SYSTEM
J30JRSIE jet drive, rope start, 15 in shaft 2001	IGNITION SYSTEM
J30JRSSB Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J30MLSRC	IGNITION
J30MLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J30MLSTS	IGNITION
J30MLSTS - FR	22-5_SYSTÈME D'ALLUMAGE
J30RCCE 1988	IGNITION
J30RCUB 1987	IGNITION
J30REDE 1996	IGNITION
J30REEC 1999	IGNITION
J30REEN 1999	IGNITION

J30REOB 1995	IGNITION
J30RERM 1994	IGNITION
J30RETA 1993	IGNITION
J30REUD 1997	IGNITION
J30RLCCE 1988	IGNITION
J30RLCUB 1987	IGNITION
J30RLEDE 1996	IGNITION
J30RLEEC 1999	IGNITION
J30RLEEN 1999	IGNITION
J30RLEOB 1995	IGNITION
J30RLERM 1994	IGNITION
J30RLETA 1993	IGNITION
J30RLEUD 1997	IGNITION
J30RLSIA rope start, tiller, 20 in shaft 2001	IGNITION
J30RLSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J30RLSNF Rope start, White, Tiller, 20 in. shaft, A/C Light 2002	IGNITION
J30RLSOD	IGNITION
J30RLSOD - FR	22-5_SYSTÈME D'ALLUMAGE
J30RLSRE	IGNITION
J30RLSRE - FR	22-5_SYSTÈME D'ALLUMAGE
J30RLSSR Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J30RLSTB	IGNITION
J30RLSTB - FR	22-5_SYSTÈME D'ALLUMAGE
J30RSIA rope start, tiller, 15 in shaft 2001	IGNITION
J30RSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J30RSNF Rope start, White, Tiller, 15 in. shaft, A/C Light 2002	IGNITION
J30RSOD	IGNITION
J30RSOD - FR	22-5_SYSTÈME D'ALLUMAGE
J30RSRE	IGNITION
J30RSRE - FR	22-5_SYSTÈME D'ALLUMAGE
J30RSSR Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
J30RSTB	IGNITION
J30RSTB - FR	22-5_SYSTÈME D'ALLUMAGE
J30RVLSIA rope start, tiller, 20 in shaft, wht 2001	IGNITION
J30RVSIA rope start, tiller, 15 in shaft, wht 2001	IGNITION

J30TECCE 1988	IGNITION
J30TECUB 1987	IGNITION
J30TEECS 1998	IGNITION
J30TEEDE 1996	IGNITION
J30TEEOB 1995	IGNITION
J30TEERM 1994	IGNITION
J30TEETA 1993	IGNITION
J30TEEUD 1997	IGNITION
J30TELCCE 1988	IGNITION
J30TELCUB 1987	IGNITION
J30TELECS 1998	IGNITION
J30TELEDE 1996	IGNITION
J30TELEOB 1995	IGNITION
J30TELERM 1994	IGNITION
J30TELETA 1993	IGNITION
J30TELEUD 1997	IGNITION
J35AELCUD 1987	IGNITION SYSTEM
J35ARLCUD 1987	IGNITION SYSTEM
J35RCCE 1988	IGNITION
J35RCUB 1987	IGNITION
J35RERM 1994	IGNITION
J35RETA 1993	IGNITION
J35RLCCE 1988	IGNITION
J35RLCUB 1987	IGNITION
J35RLERM 1994	IGNITION
J35RLETA 1993	IGNITION
J40AELCCS 1988	IGNITION SYSTEM
J40ARLCCS 1988	IGNITION SYSTEM
J40ATLCCS 1988	IGNITION SYSTEM
J40ECCS 1988	IGNITION SYSTEM
J40ECUD 1987	IGNITION SYSTEM
J40EEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40EERE 1994	IGNITION SYSTEM - 40 ROPE START
J40EETB 1993	IGNITION SYSTEM - 40 ROPE START
J40ELCCS 1988	IGNITION SYSTEM

J40ELCUD 1987	IGNITION SYSTEM
J40ELECR 1998	IGNITION SYSTEM -- ROPE START
J40ELED 1996	IGNITION SYSTEM - 40 ROPE START
J40ELED 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40ELERE 1994	IGNITION SYSTEM - 40 ROPE START
J40LETB 1993	IGNITION SYSTEM - 40 ROPE START
J40LEUC 1997	IGNITION SYSTEM - ROPE START
J40JRECA 1998	IGNITION SYSTEM
J40JREDC 1996	IGNITION SYSTEM
J40JREOS 1995	IGNITION SYSTEM
J40JREUR 1997	IGNITION SYSTEM
J40PLEEA 1999	IGNITION SYSTEM -- ROPE START
J40PLSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40PLSSM Elec. Start, TNT, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RCCS 1988	IGNITION SYSTEM
J40RCUD 1987	IGNITION SYSTEM
J40RECR 1998	IGNITION SYSTEM -- ROPE START
J40REDS 1996	IGNITION SYSTEM - 40 ROPE START
J40REEA 1999	IGNITION SYSTEM -- ROPE START
J40REOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40RERE 1994	IGNITION SYSTEM - 40 ROPE START
J40RETB 1993	IGNITION SYSTEM - 40 ROPE START
J40REUC 1997	IGNITION SYSTEM - ROPE START
J40RLCCS 1988	IGNITION SYSTEM
J40RLCUD 1987	IGNITION SYSTEM
J40RLECR 1998	IGNITION SYSTEM -- ROPE START
J40RLED 1996	IGNITION SYSTEM - 40 ROPE START
J40RLEEA 1999	IGNITION SYSTEM -- ROPE START
J40RLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40RLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40RLETB 1993	IGNITION SYSTEM - 40 ROPE START
J40RLEUC 1997	IGNITION SYSTEM - ROPE START
J40RLSIF rope start, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40RLSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J40RLSNF 20 in. shaft, White, Tiller, Rope, Touch Trim 2002	IGNITION SYSTEM

J40RLSOC	IGNITION SYSTEM
J40RLSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J40RLSRS	IGNITION SYSTEM
J40RLSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J40RLSSM Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RLSTD	IGNITION SYSTEM
J40RLSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSIF rope start, 15 in shaft 2001	IGNITION SYSTEM - ROPE START
J40RSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSNF 15 in. shaft, White, Tiller, Rope, Touch Trim 2002	IGNITION SYSTEM
J40RSOC	IGNITION SYSTEM
J40RSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSRS	IGNITION SYSTEM
J40RSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSSM Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RSTD	IGNITION SYSTEM
J40RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J40TECCS 1988	IGNITION SYSTEM
J40TECUD 1987	IGNITION SYSTEM
J40TEECR 1998	IGNITION SYSTEM -- ROPE START
J40TEEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TEERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TEETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TEEUC 1997	IGNITION SYSTEM - ROPE START
J40TELCCS 1988	IGNITION SYSTEM
J40TELECR 1998	IGNITION SYSTEM -- ROPE START
J40TELEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TELERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TELEUC 1997	IGNITION SYSTEM - ROPE START
J40TLCCS 1988	IGNITION SYSTEM
J40TLCUD 1987	IGNITION SYSTEM
J40TLECR 1998	IGNITION SYSTEM -- ROPE START

J40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
J40TLEUC 1997	IGNITION SYSTEM - ROPE START
J40TPLEEA 1999	IGNITION SYSTEM -- ROPE START
J40TPLSIF elec start, tiller, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40TPLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40TTLCCS 1988	IGNITION SYSTEM
J40TTLECR 1998	IGNITION SYSTEM -- ROPE START
J40TTLEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TTLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TTLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TTLETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TTLETF 1993	IGNITION SYSTEM - 40 ROPE START
J40TTLEUC 1997	IGNITION SYSTEM - ROPE START
J40WREES 1999	IGNITION SYSTEM
J40WRLEES 1999	IGNITION SYSTEM
J40WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
J40WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J40WRYEES 1999	IGNITION SYSTEM
J40WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
J45RCENM 1992	IGNITION SYSTEM - ROPE START
J45RCEOD 1995	IGNITION SYSTEM
J45RCERE 1994	IGNITION SYSTEM
J45RCETB 1993	IGNITION SYSTEM
J45RCLEDS 1996	IGNITION SYSTEM
J45RCLENM 1992	IGNITION SYSTEM - ROPE START
J45RCLEOD 1995	IGNITION SYSTEM
J45RCLERE 1994	IGNITION SYSTEM
J45RCLETB 1993	IGNITION SYSTEM

J45RCLEUC 1997	IGNITION SYSTEM
J45WMLNEM 1992	IGNITION SYSTEM - ROPE START
J48ESLCCC 1988	IGNITION SYSTEM
J48ESLCUS 1987	IGNITION SYSTEM
J4RDHCCS 1988	MAGNETO
J4RDHCUD 1987	MAGNETO
J4RDHEOD 1995	MAGNETO
J4RDHERE 1994	MAGNETO
J4RDHLCCS 1988	MAGNETO
J4RDHLCUD 1987	MAGNETO
J4RDHLEOD 1995	MAGNETO
J4RDHLERE 1994	MAGNETO
J50BECCS 1988	IGNITION SYSTEM
J50BECUD 1987	IGNITION SYSTEM
J50BEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50BEERE 1994	IGNITION SYSTEM - 40 ROPE START
J50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
J50BELCCS 1988	IGNITION SYSTEM
J50BELCUD 1987	IGNITION SYSTEM
J50BELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50BELERE 1994	IGNITION SYSTEM - 40 ROPE START
J50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
J50ELEER 1999	IGNITION SYSTEM -- ROPE START
J50ELSIF elec start, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J50ELSSA Elec. Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J50ESLECC 1998	IGNITION SYSTEM -- ROPE START
J50ESLEUR 1997	IGNITION SYSTEM - ROPE START
J50JEDS 1996	IGNITION SYSTEM - 40 ROPE START
J50JEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50JERE 1994	IGNITION SYSTEM - 40 ROPE START
J50JETB 1993	IGNITION SYSTEM - 40 ROPE START
J50JEUC 1997	IGNITION SYSTEM - ROPE START
J50PLEEA 1999	IGNITION SYSTEM -- ROPE START
J50PLSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START

J50TELCCS 1988	IGNITION SYSTEM
J50TELCUD 1987	IGNITION SYSTEM
J50TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50TELERE 1994	IGNITION SYSTEM - 40 ROPE START
J50TELETB 1993	IGNITION SYSTEM - 40 ROPE START
J50TLCCS 1988	IGNITION SYSTEM
J50TLCUD 1987	IGNITION SYSTEM
J50TLECR 1998	IGNITION SYSTEM -- ROPE START
J50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
J50TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50TLERE 1994	IGNITION SYSTEM - 40 ROPE START
J50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
J50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
J50TLEUC 1997	IGNITION SYSTEM - ROPE START
J50TSLECC 1998	IGNITION SYSTEM -- ROPE START
J50TSLEUS 1997	IGNITION SYSTEM - ROPE START
J55APRL	IGNITION & ELECTRICAL
J55APRL - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSOM	IGNITION & ELECTRICAL
J55APRLSOM - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSRA	IGNITION & ELECTRICAL
J55APRLSRA - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSRG	IGNITION & ELECTRICAL
J55APRLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSOR	IGNITION & ELECTRICAL
J55MLSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSRC	IGNITION & ELECTRICAL
J55MLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSRG	IGNITION & ELECTRICAL
J55MLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55MRL	IGNITION & ELECTRICAL
J55MRL - FR	22-5_SYSTÈME D'ALLUMAGE
J55RSLC 1997	IGNITION SYSTEM
J55RSLG 1995	IGNITION SYSTEM
J55RSLW 1996	IGNITION SYSTEM

J55RWLENM 1992	IGNITION SYSTEM - ROPE START
J55RWLERE 1994	IGNITION SYSTEM
J55RWLETB 1993	IGNITION SYSTEM
J55WREES 1999	IGNITION SYSTEM
J55WRLEES 1999	IGNITION SYSTEM
J55WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
J55WRLSOE	IGNITION SYSTEM
J55WRLSOE - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSRB	IGNITION SYSTEM
J55WRLSRB - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSRG	IGNITION SYSTEM
J55WRLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
J55WRLSTM	IGNITION SYSTEM
J55WRLSTM - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J55WRYEES 1999	IGNITION SYSTEM
J55WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
J55WRYSOB	IGNITION SYSTEM
J55WRYSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRYSRM	IGNITION SYSTEM
J55WRYSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
J5DRECR 1998	IGNITION
J5DRLECR 1998	IGNITION
J6RCCS 1988	IGNITION
J6RECR 1998	IGNITION
J6REDS 1996	IGNITION
J6REEA 1999	IGNITION
J6REOD 1995	IGNITION
J6RERE 1994	IGNITION
J6RETB 1993	IGNITION
J6REUC 1997	IGNITION
J6RLCCS 1988	IGNITION

J6RLECR 1998	IGNITION
J6RLEDS 1996	IGNITION
J6RLEEA 1999	IGNITION
J6RLEOD 1995	IGNITION
J6RLERE 1994	IGNITION
J6RLETB 1993	IGNITION
J6RLEUC 1997	IGNITION
J6RLSIB rope start, tiller, 20 in shaft 2001	IGNITION
J6RLSOC	IGNITION
J6RLSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLSRS	IGNITION
J6RLSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J6RLSTD	IGNITION
J6RLSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	IGNITION
J6RSIB rope start, tiller, 15 in shaft 2001	IGNITION
J6RSOC	IGNITION
J6RSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J6RSRS	IGNITION
J6RSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
J6RSTD	IGNITION
J6RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	IGNITION
J6SLCCS 1988	IGNITION
J6SLEDS 1996	IGNITION
J6SLEOD 1995	IGNITION
J6SLERE 1994	IGNITION
J6SLETB 1993	IGNITION
J8DREEA 1999	IGNITION
J8RCCS 1988	IGNITION
J8RECR 1998	IGNITION
J8REDS 1996	IGNITION
J8REEM 1999	IGNITION

J8REOD 1995	IGNITION
J8RERE 1994	IGNITION
J8RETB 1993	IGNITION
J8REUC 1997	IGNITION
J8RLCCS 1988	IGNITION
J8RLECR 1998	IGNITION
J8RLEDS 1996	IGNITION
J8RLEEM 1999	IGNITION
J8RLEOD 1995	IGNITION
J8RLERE 1994	IGNITION
J8RLETB 1993	IGNITION
J8RLEUC 1997	IGNITION
J8RLSIE rope start, tiller, 20 in shaft 2001	IGNITION
J8RLSOR	IGNITION
J8RLSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLSRC	IGNITION
J8RLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J8RLSTS	IGNITION
J8RLSTS - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	IGNITION
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	IGNITION
J8RSIE rope start, tiller, 15 in shaft 2001	IGNITION
J8RSOR	IGNITION
J8RSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J8RSRC	IGNITION
J8RSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
J8RSTD	IGNITION
J8RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	IGNITION
J8RXEEM 1999	IGNITION
J8RXSIE rope start, tiller, 25 in shaft 2001	IGNITION
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	IGNITION
J8SRLCCS 1988	IGNITION

J8SRLECA 1998	IGNITION
J8SRLEDS 1996	IGNITION
J8SRLEOD 1995	IGNITION
J8SRLERE 1994	IGNITION
J8SRLETB 1993	IGNITION
J8SRLEUC 1997	IGNITION
J8WREES 1999	IGNITION
J8WRLEES 1999	IGNITION
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	IGNITION
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	IGNITION
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
RJ50ELSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
SE25RDECA 1998	IGNITION
SE25RDEDC 1996	IGNITION
SE25RDEEM 1999	IGNITION
SE25RDEEN 1999	IGNITION
SE25RDEUR 1997	IGNITION
SE25RDSIE rope start, tiller, 15 in shaft, n/a usa 2001	IGNITION
SE25RDSSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION
SE25RPLP 1998	IGNITION
SE25RPLV 1997	IGNITION - H25FP
SE25RPLV 1997	IGNITION - 25RS, 25RW, S25RP
SE25RPP 1998	IGNITION
SE25RPV 1997	IGNITION - H25FP
SE25RPV 1997	IGNITION - 25RS, 25RW, S25RP
SE35REDE 1996	IGNITION
SE35RLEDE 1996	IGNITION
SE40RPB 1997	IGNITION SYSTEM
SE40RPH 1996	IGNITION SYSTEM
SE40RPLB 1997	IGNITION SYSTEM
SE40RPLH 1996	IGNITION SYSTEM
SE40RPLT2 1998	IGNITION SYSTEM
SE40RPT2 1998	IGNITION SYSTEM
SE40RPYB 1997	IGNITION SYSTEM

SE40RPYH 1996	IGNITION SYSTEM
SE40RPYT2 1998	IGNITION SYSTEM
SE40RSLD 1997	IGNITION SYSTEM
SE40RSLR 1998	IGNITION SYSTEM
SE40RSLZ 1996	IGNITION SYSTEM
SE45RSLB 1997	IGNITION SYSTEM
SE45RSLH 1996	IGNITION SYSTEM
SE50TLED5 1996	IGNITION SYSTEM - 40 ROPE START
SE55RSC 1997	IGNITION SYSTEM
SE55RSLC 1997	IGNITION SYSTEM
SE55RSLM2 1998	IGNITION SYSTEM
SE55RSLW 1996	IGNITION SYSTEM
SE55RSM2 1998	IGNITION SYSTEM
SE55RSW 1996	IGNITION SYSTEM
SE55RSYC 1997	IGNITION SYSTEM
SE55RSYM2 1998	IGNITION SYSTEM
SE55RSYW 1996	IGNITION SYSTEM
SJ25RDECA 1998	IGNITION
SJ25RDEDC 1996	IGNITION
SJ25RDEEM 1999	IGNITION
SJ25RDEEMN 1999	IGNITION
SJ25RDEUR 1997	IGNITION
SJ25REDA 1996	IGNITION
SJ25RLEDA 1996	IGNITION
SJ25RPLP 1998	IGNITION
SJ25RPLV 1997	IGNITION - H25FP
SJ25RPLV 1997	IGNITION - 25RS, 25RW, S25RP
SJ25RPP 1998	IGNITION
SJ25RPV 1997	IGNITION - H25FP
SJ25RPV 1997	IGNITION - 25RS, 25RW, S25RP
SJ25RTEEM 1999	IGNITION
SJ25RTSIE rope start, tiller, 15 in shaft, n/a usa 2001	IGNITION
SJ25RTSSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION
SJ25TEEDA 1996	IGNITION
SJ25TEEUM 1997	IGNITION

SJ30EED 1996	IGNITION
SJ30REDE 1996	IGNITION
SJ30LEDE 1996	IGNITION
SJ30TEEUD 1997	IGNITION
SJ35REDE 1996	IGNITION
SJ35LEDE 1996	IGNITION
SJ40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40REDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40LEDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40RPB 1997	IGNITION SYSTEM
SJ40RPH 1996	IGNITION SYSTEM
SJ40RPLB 1997	IGNITION SYSTEM
SJ40RPLH 1996	IGNITION SYSTEM
SJ40RPLT2 1998	IGNITION SYSTEM
SJ40RPT2 1998	IGNITION SYSTEM
SJ40RPYB 1997	IGNITION SYSTEM
SJ40RPYH 1996	IGNITION SYSTEM
SJ40RPYT2 1998	IGNITION SYSTEM
SJ40RSLD 1997	IGNITION SYSTEM
SJ40RSLR 1998	IGNITION SYSTEM
SJ40RSLZ 1996	IGNITION SYSTEM
SJ45RSLB 1997	IGNITION SYSTEM
SJ45RSLH 1996	IGNITION SYSTEM
SJ55RSC 1997	IGNITION SYSTEM
SJ55RSLC 1997	IGNITION SYSTEM
SJ55RSLM2 1998	IGNITION SYSTEM
SJ55RSLW 1996	IGNITION SYSTEM
SJ55RSM2 1998	IGNITION SYSTEM
SJ55RSW 1996	IGNITION SYSTEM
SJ55RSYC 1997	IGNITION SYSTEM
SJ55RSYM2 1998	IGNITION SYSTEM
SJ55RSYW 1996	IGNITION SYSTEM
SJ6REDS 1996	IGNITION
SJ6RLEDS 1996	IGNITION
SJ8REDS 1996	IGNITION

SJ8RLEDS 1996	IGNITION
TE20CRETS 1993	IGNITION
TE20CRLETS 1993	IGNITION
TE25ELETB 1993	IGNITION
TE40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
TJ20CRETS 1993	IGNITION
TJ20CRLETS 1993	IGNITION
TJ25ELETB 1993	IGNITION
TJ40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
U25RWA 1988	MAGNETO
U25RWLA 1988	MAGNETO
VE14RCCS 1988	MAGNETO
VE25ELETB 1993	IGNITION
VE28ESLCCR 1988	IGNITION
VE30EETA 1993	IGNITION
VE30ELETB 1993	IGNITION
VE40EETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
VE48ESLCCC 1988	IGNITION SYSTEM
VE50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
VJ14RCCS 1988	MAGNETO
VJ25ELETB 1993	IGNITION
VJ28ESLCCR 1988	IGNITION
VJ30EETA 1993	IGNITION
VJ30ELETB 1993	IGNITION
VJ40EETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40TLETB 1993	IGNITION SYSTEM - 40 ROPE START

VJ40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
VJ48ESLCCC 1988	IGNITION SYSTEM
VJ50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
X50ESLECC 1998	IGNITION SYSTEM -- ROPE START